


1. Go to the directory QCfactorytool_sign


名称	修改日期	类型
QCfactorytool_sign	2022/3/28 14:53	文件夹
SMBIOS_update_SOP.docx	2022/3/28 15:20	Microsoft Word 文档
SMBIOStool v1.5.5.19.exe	2022/1/15 16:20	应用程序

2. Run WriteDMI.BAT as an administrator

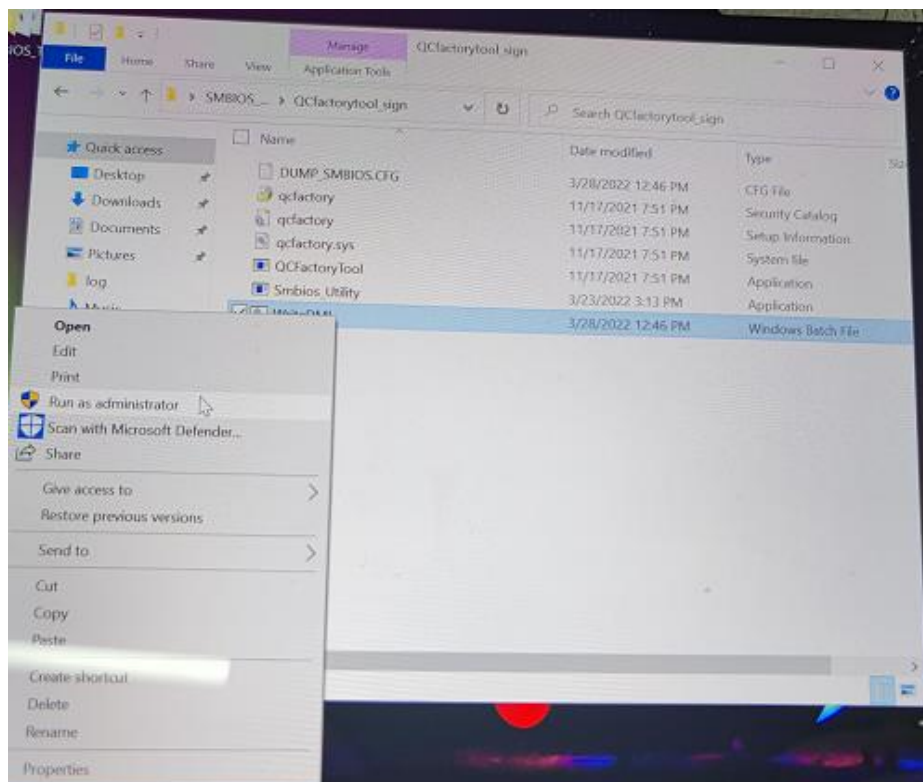

3. Select the information you want to modify
Example


mt : MTM number. pn : Product name. ln : Lenovo SN. uu : UUID.

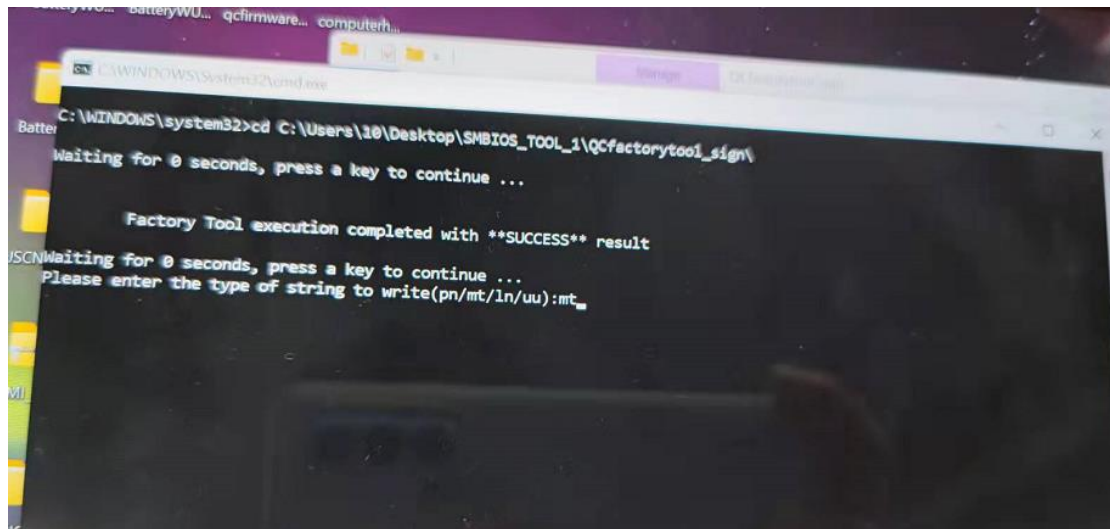

4. Enter the value that you want to modify

Example


82SU (Enter the value that you want to modify)

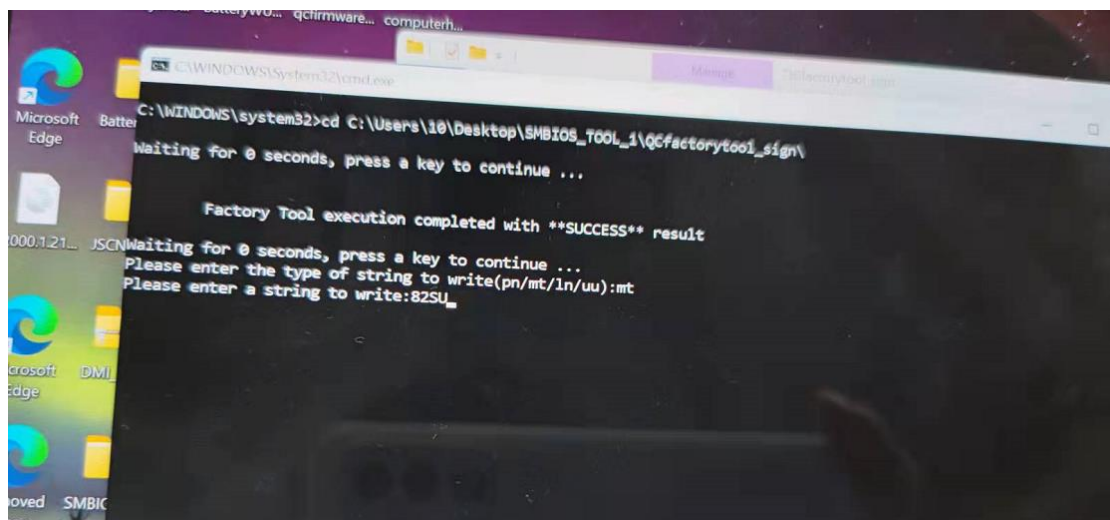

5. Select whether additional values need to be entered

Y: yes, steps 3 and 4 will be repeated

N: no, the program writes the information that needs to be modified to SMBIOS

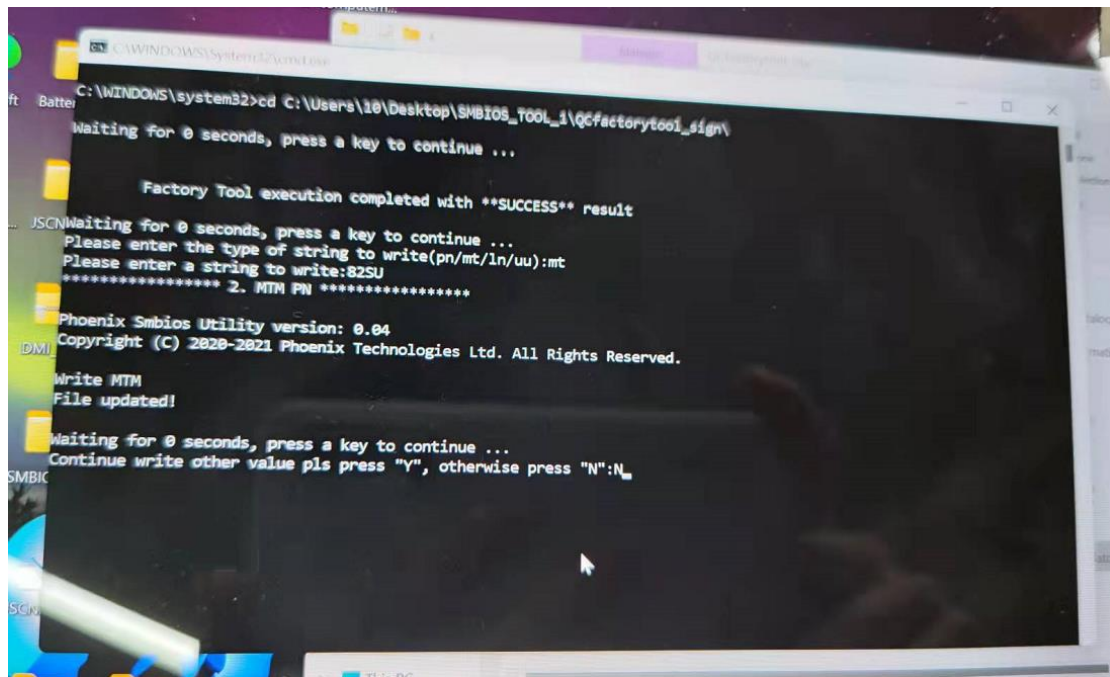

6. If "Success" is displayed, the update succeeds, restart the device manually and check again.

